

# How to Install a Door Sweep on wood doors

---


Tools needed: Drill, 1/8" drill bit, utility knife, silicone sealant- clear, screws (self tapping flange/pan head)



*Notice the Door Sweep Orientation.*

Lip on Inside of home

Flange towards outside  
flange stays under door slab,  
not up the face of door.

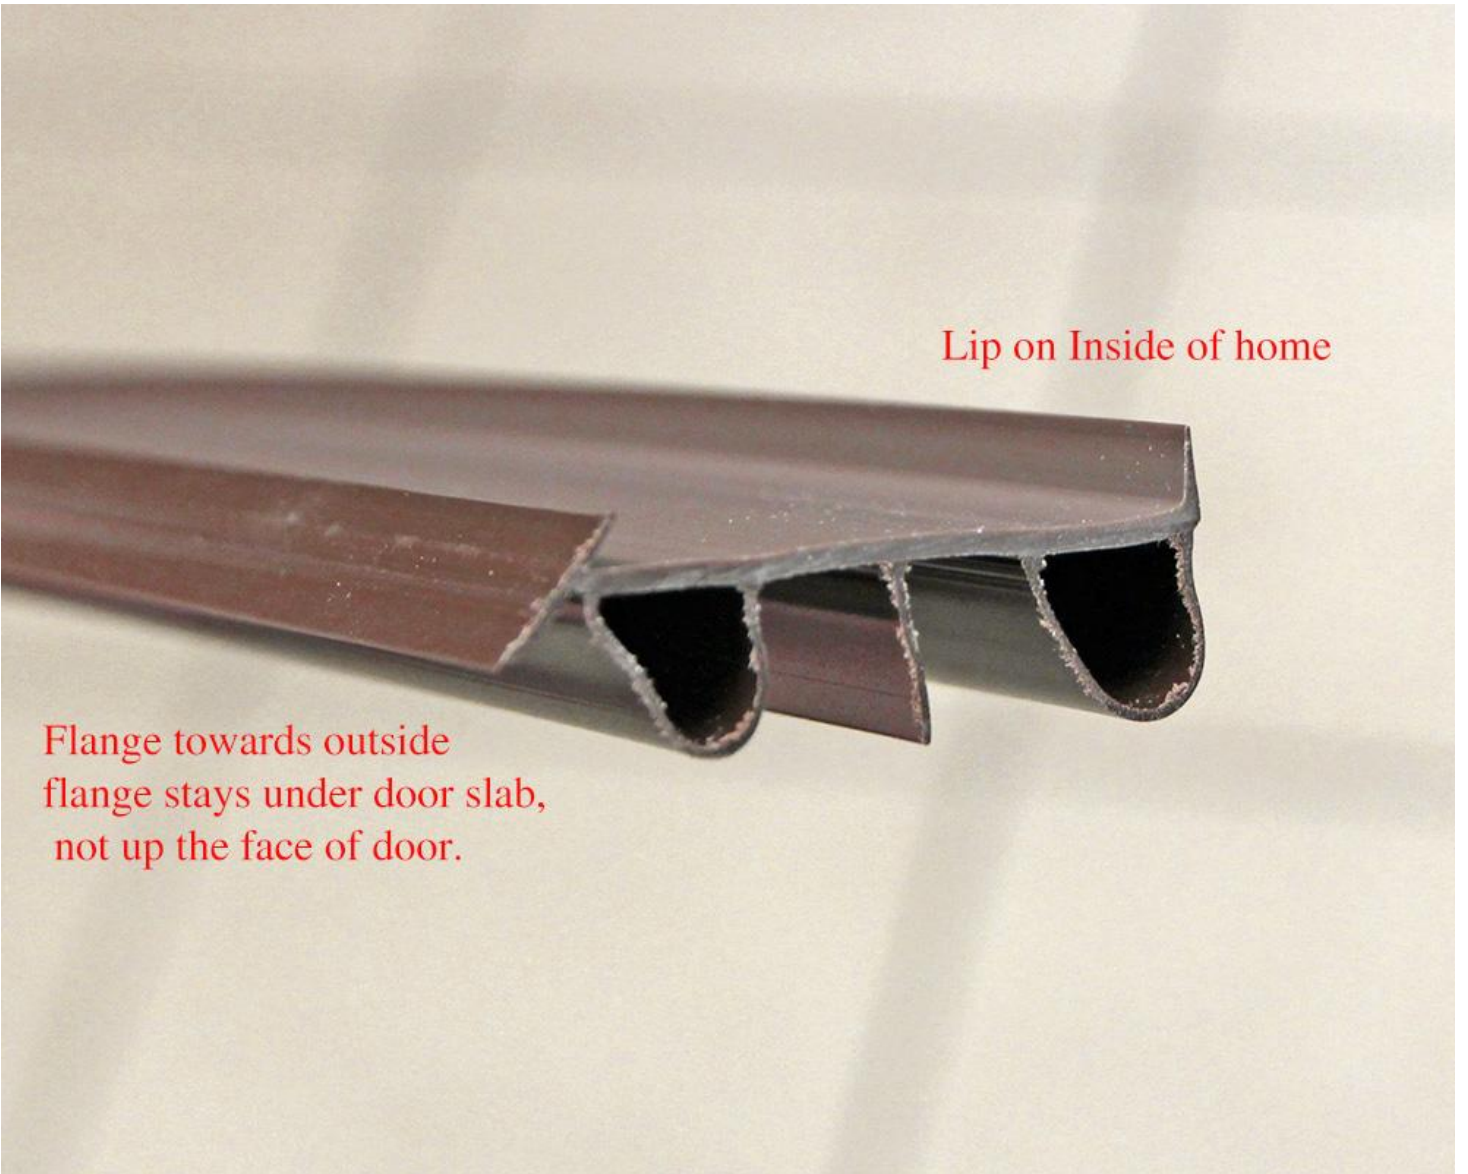



The Door Sweep has a Natural Drip Edge. The 45 degree Flange stays under the edge of the door and creates a minimalist profile to not distract from the clean look of the face of the door.




Note: You probably just got done Staining and Finishing the door and it is removed from the Jamb (door frame) and is laying face down across cushioned sawhorses.

Step 1. Trim the Door Sweep to the proper length of the door.

Step 2. (optional) pre drill holes about every 5 inches across the length of the sweep.

Step 3. Place a Bead of Silicone Caulk at the locations in Red.

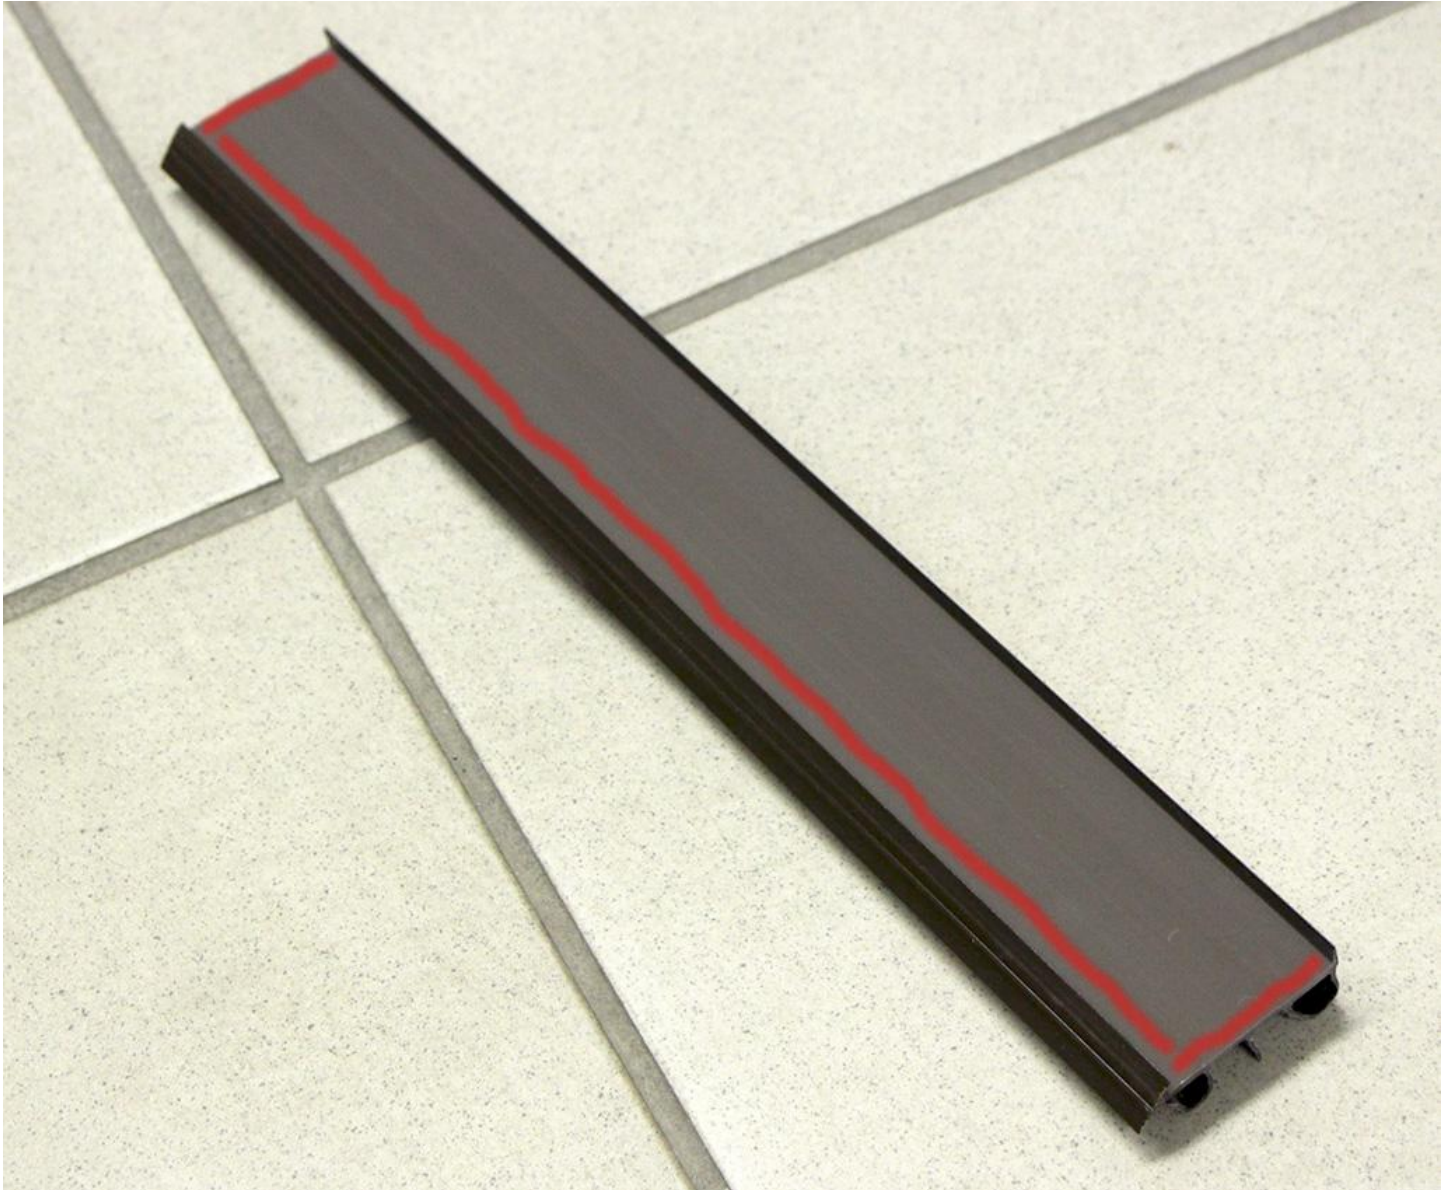



Step 4. Place the sweep on the bottom of the door and start to install screws from one end to the other.

Note: Wipe smooth any excess silicone that might seep out the sides, we don't want moisture to seep under and around this location.



Step 5. Re-install the door in the jamb carefully.

Step 6. Test the opening and closing of the door.

Step 7. Raise or Lower the adjustable sill cap if necessary.

